




361-000100

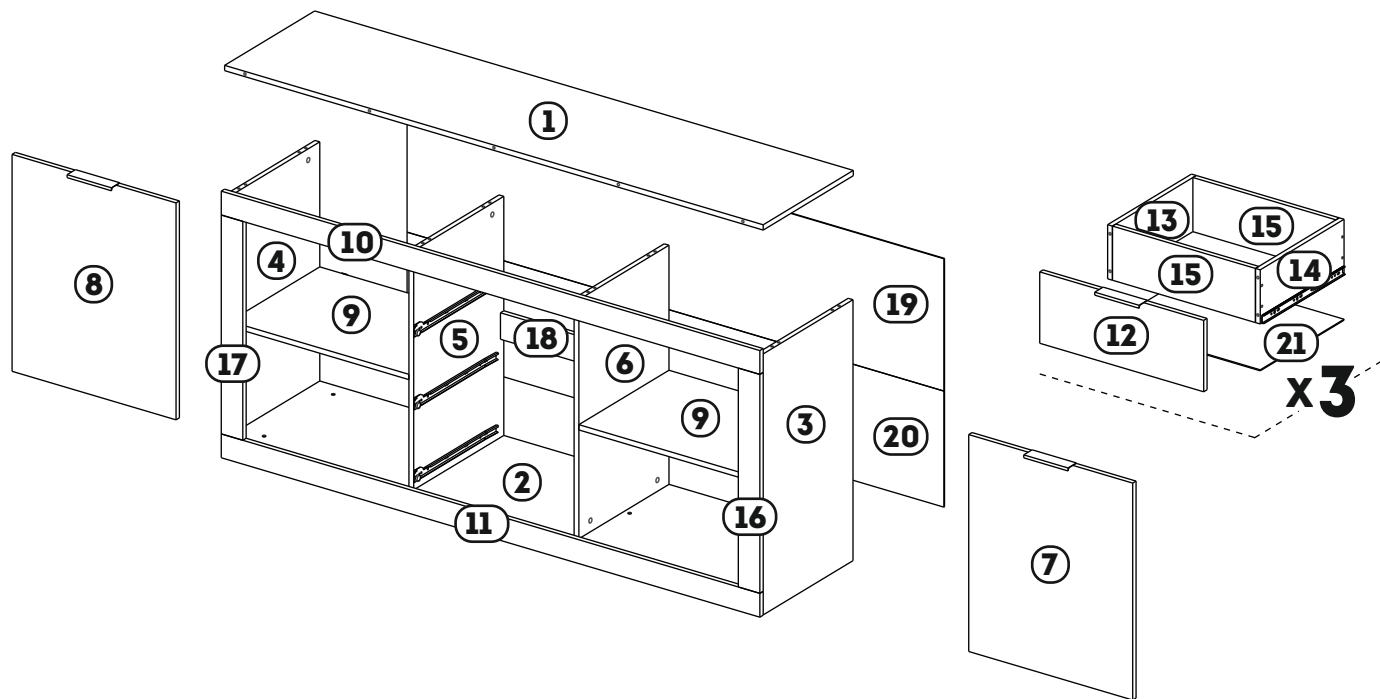


No	a*b	X	Pack
1	1500x430	1	
2	1466x430	1	
3	788x430	1	
4	788x430	1	
5	722x430	1	
6	722x430	1	
7	655x448	1	
8	655x448	1	
9	499x430	2	
10	72x1500	1	
11	72x1500	1	
12	216x448	3	
13	400x164	3	
14	400x164	3	
15	378x164	6	
16	661x72	1	
17	661x72	1	
18	80x436	1	
19	399x1494	1	
20	351x1494	1	
21	410x400	3	


Minifix

**x28****M1**


Rear Panel Fixing Screw

**x6****K3**


90 Degree Hinge

**x4****P9**


Confirmat

**x24****A1**



Minifix Screw

**x28****M2**



Mounting Plate

**x4****P6**



Dowel

**x28****C1**Screw
3,5x16**x57****W1**

Cap for Minifix

**x28****M3**Screw
3,5x30**x12****W3**Nail
1x16**x86****K1**

Cap for confirmat

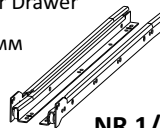**x24****A2**Lining (Manhatan)
50MM**x6****Q3**Roller Drawer
Slide
400 MM**x3****NR 1/2**


Confirmation y

**x1****A3**


Handle


**x5****RK 1**

Rafix

**x8****R1**



Rafix Screw

**x8****R2**

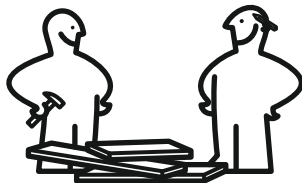


GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

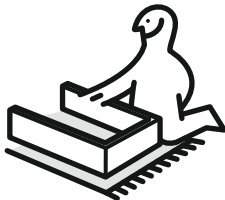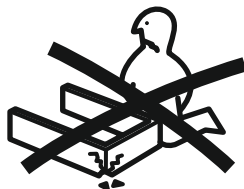

CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

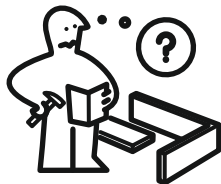

1


Minifix



x12

M1


Roller Drawer
Slide
400 MM



x3

NR 1


Screw
3,5x16



x12

W1


Rafix Screw



x4





R2

Minifix Screw



x4

M2

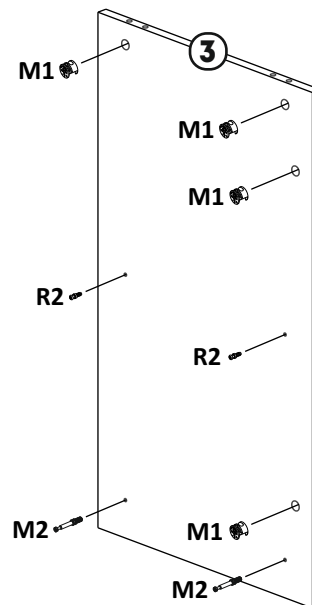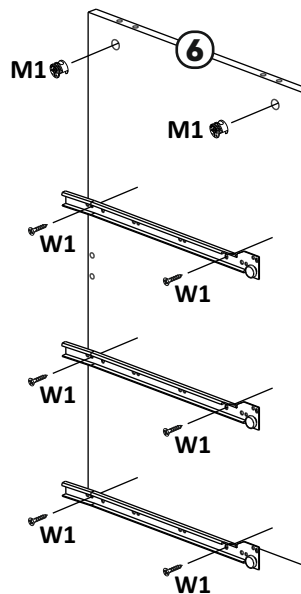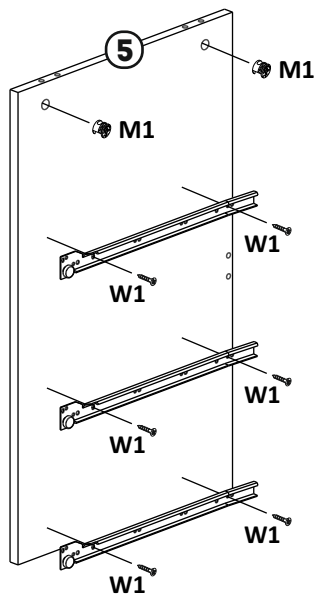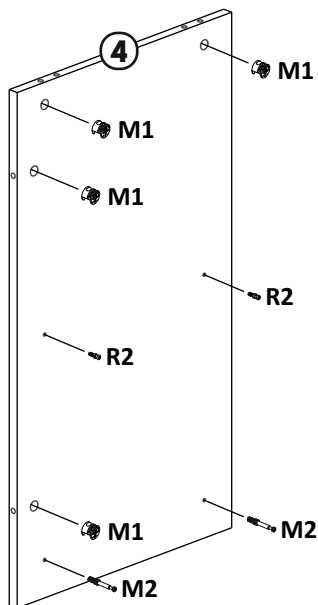

2


Minifix



x12

M1


Dowel



x8

C1


Minifix Screw



x8



M2

Lining (Manhatan)
50MM








x6

Q3

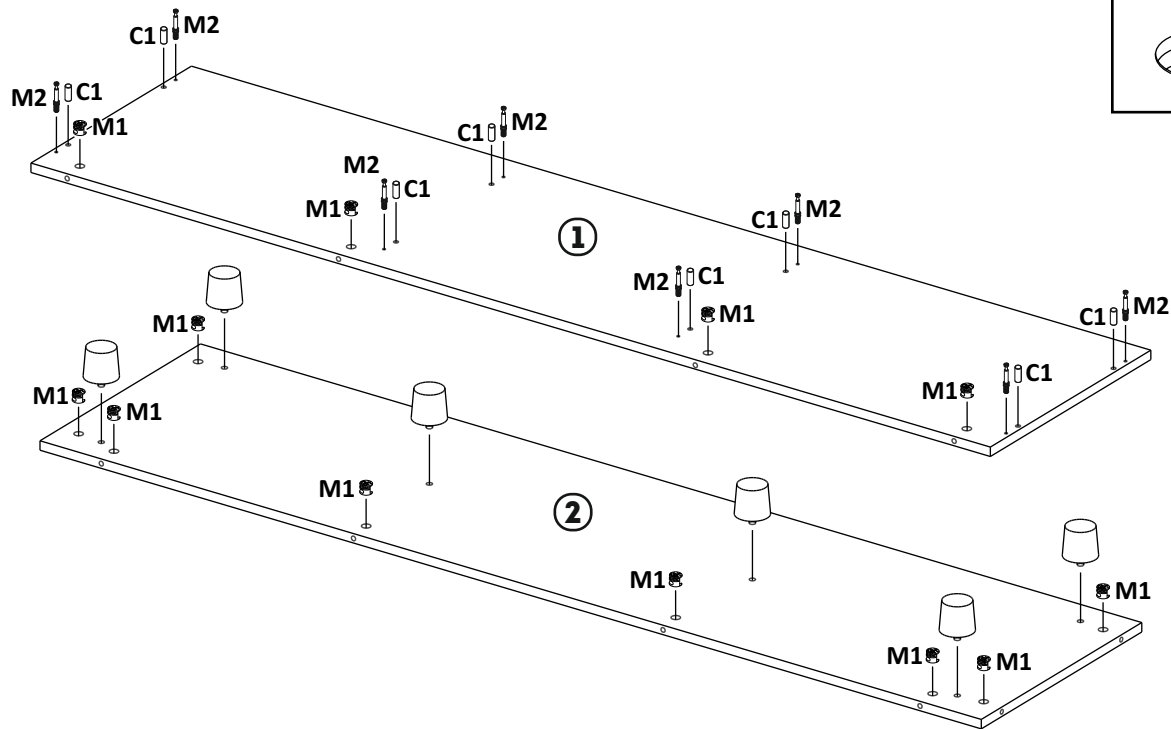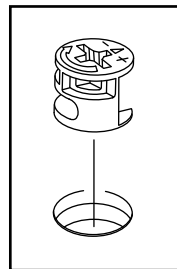


3

Dowel

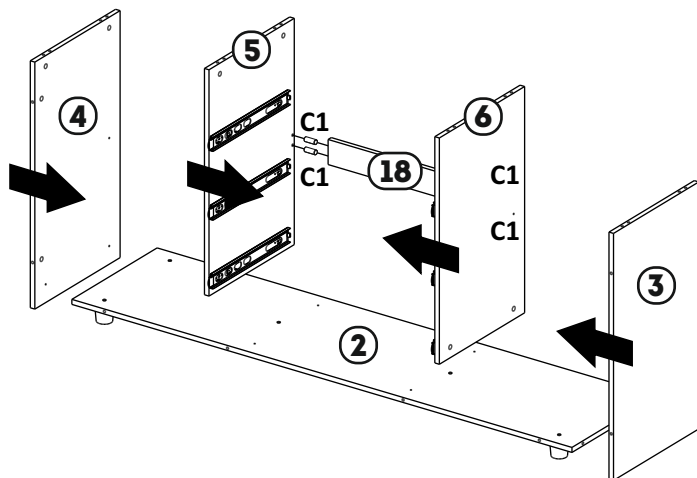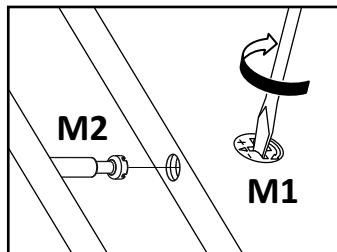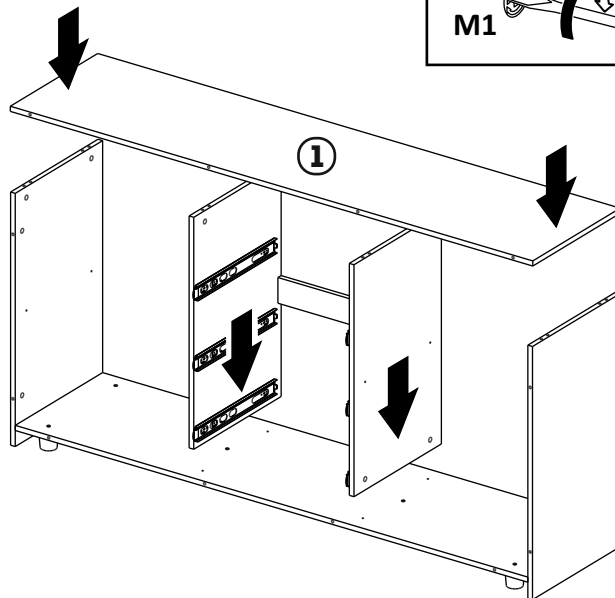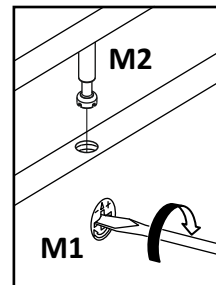**x4****C1****4**






5

Rear Panel Fixing Screw




x6

K3

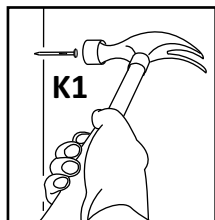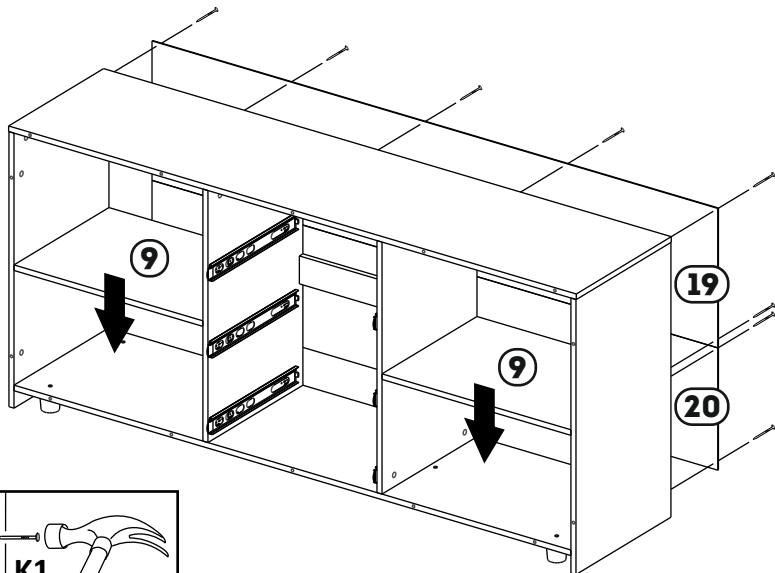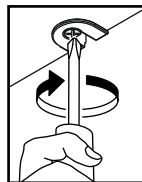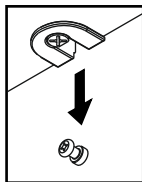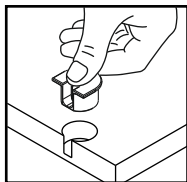

6


Minifix Screw



x12



M2

Mounting Plate




x4

P6

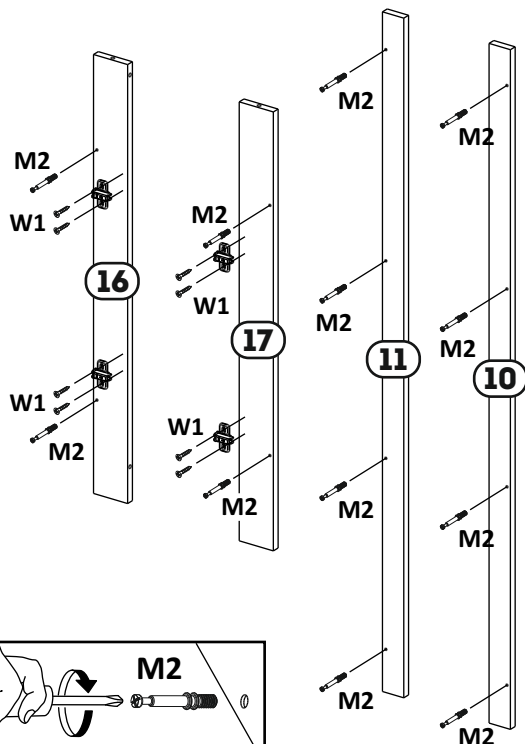


7

Dowel





x4

C1

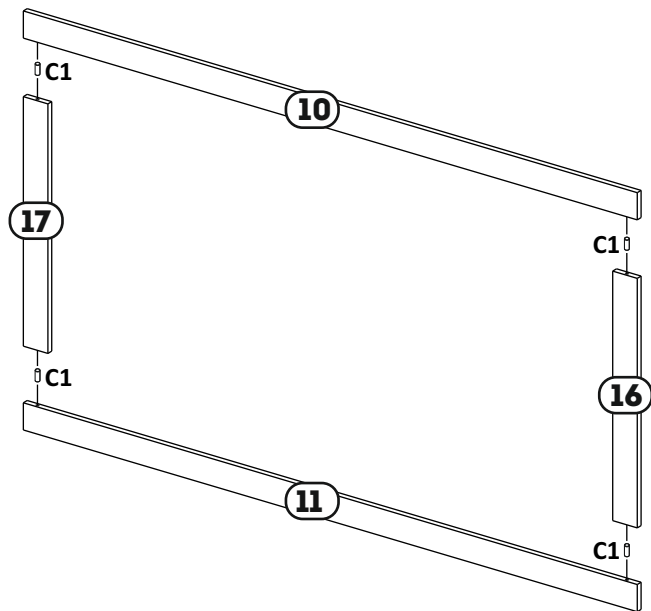


8

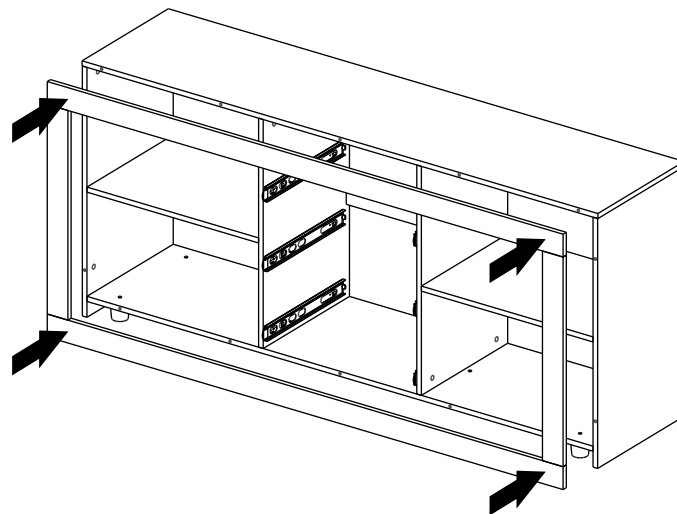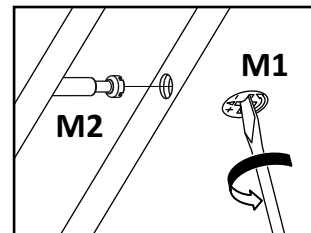

9

Confirmat



x8




A1

Cap for confirmate




x8

A2

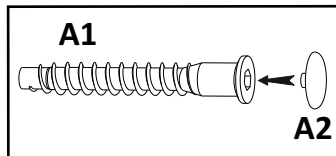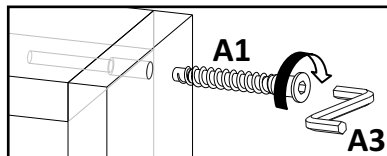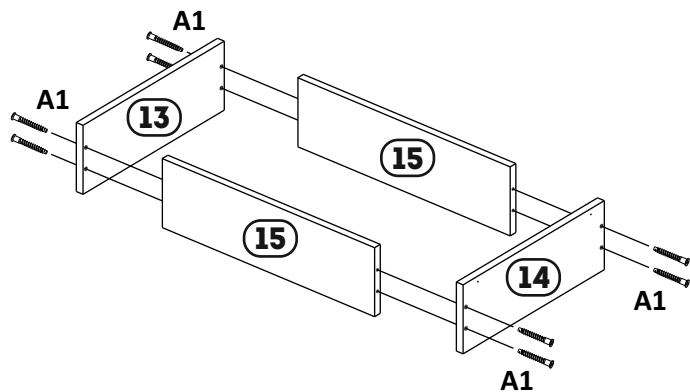



10


Nail
1x16




x14

K1




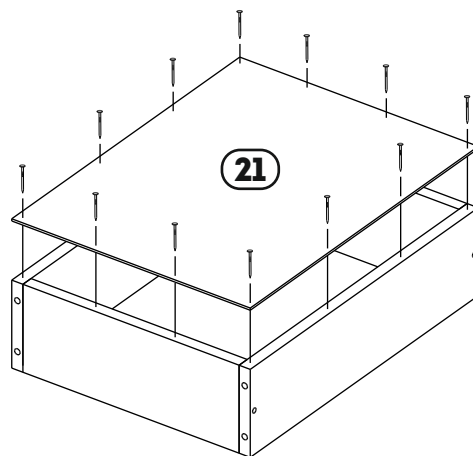
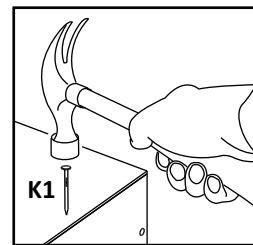


11Screw
3,5x30**x4****W3**

Dowel

**x4****C1**

Handle

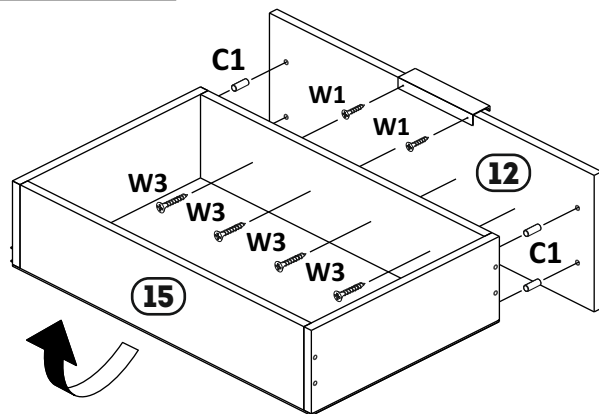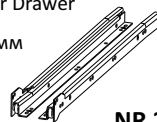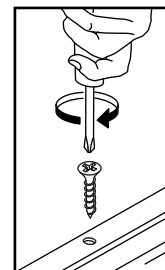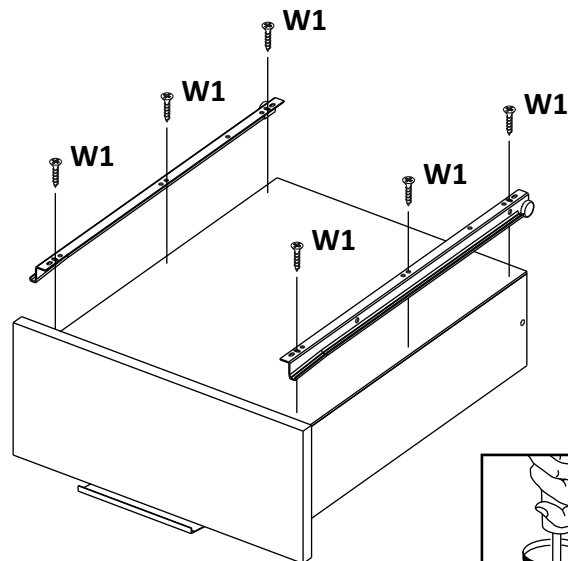
**x1****RK 1****12**Roller Drawer
Slide
400 mm**x3****NR 2**Screw
3,5x16**x6****W1**

13

90 Degree Hinge

x4


P9



Screw
3,5x16

x12


W1



Handle

x2

RK 1

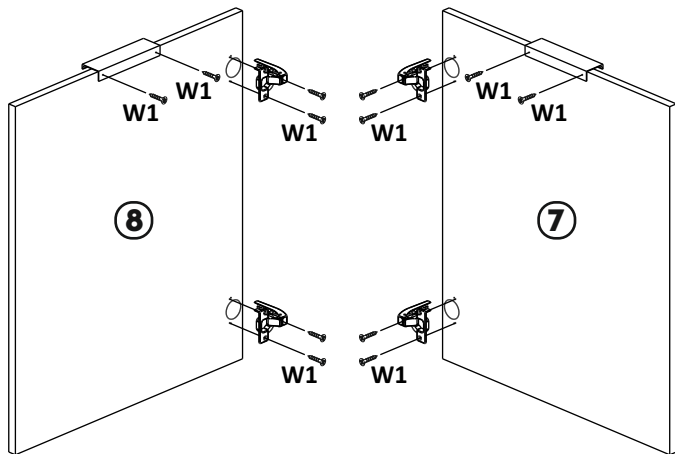

14

