
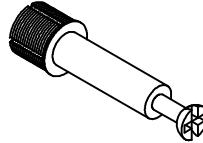
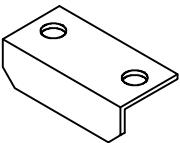

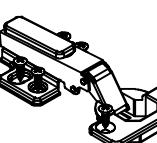
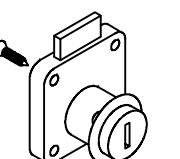



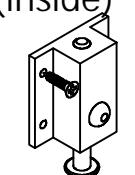
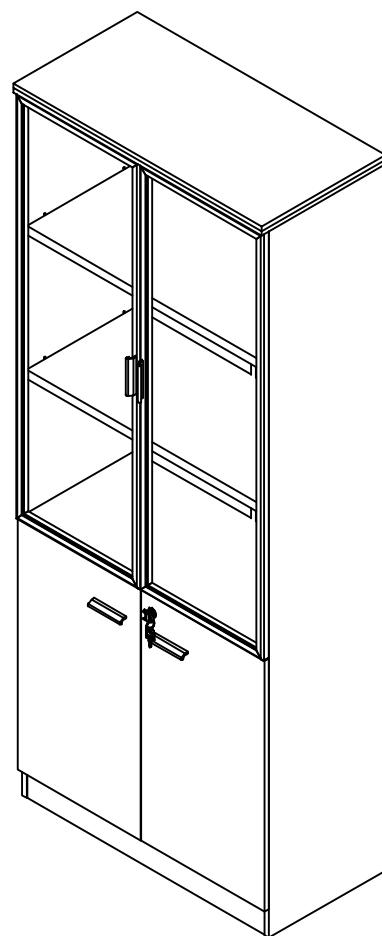




246-000006

Minifix Screw  X32	Full overlay hinge (glass door)  X6	Lock metal minifix  X2	Back panel rubber fix  X8	P
Minifix  X32	Full overlay hinge  X4	Lock  X1		
Wood Minifix  X6	Handle  X4	Screw  4*20 X4		
Back panel bar fix  X1	Handle screw M4*18  X4	Screw 3.5*14  X76		
Shelves fix screw  X12	Handle screw M4*25  X4	Lock(inside)  X1		
				 (800X400X2000)

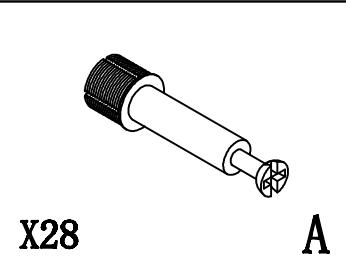


STEP:1


To fix the panel 1 and panel 2

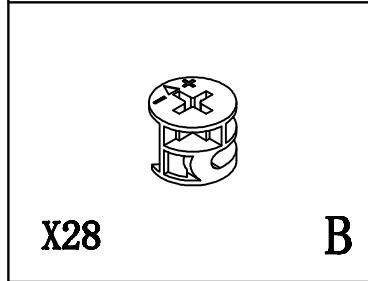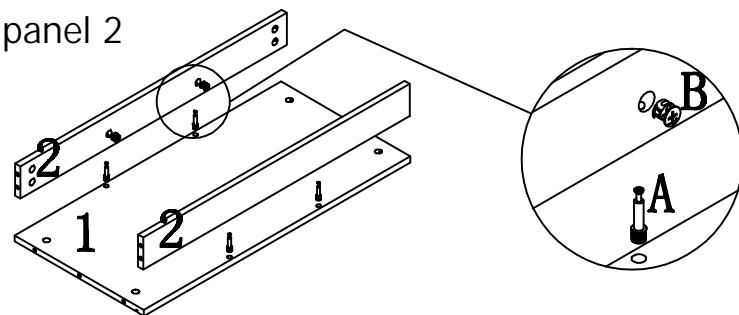








To fix the side panel 3 and bottom support firstly, then to panel 5, final to fix the panel 4

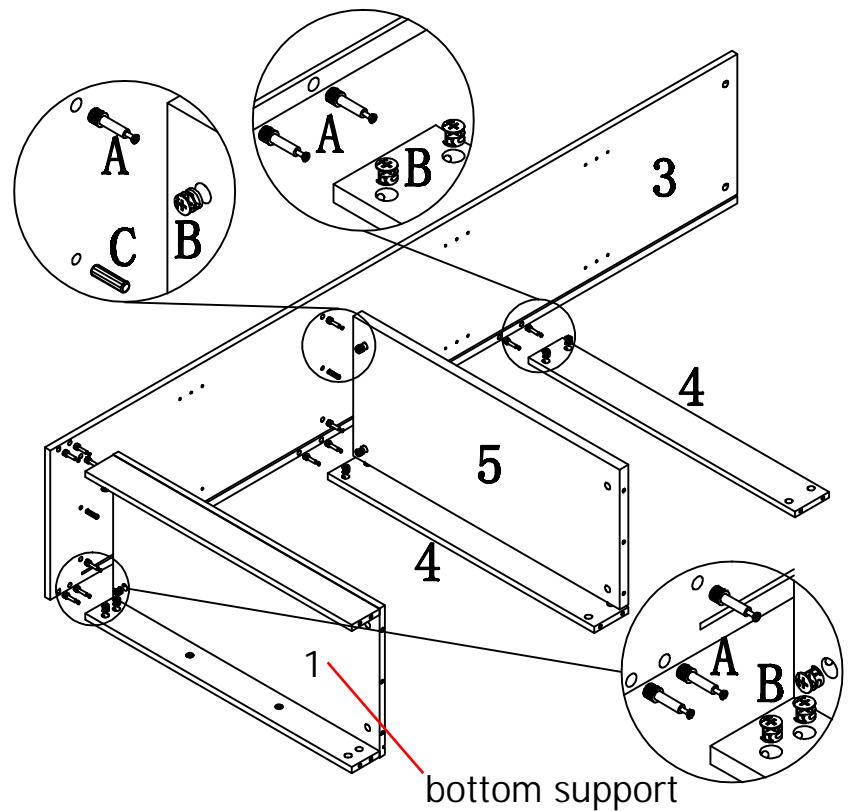

To fix the side panel 6

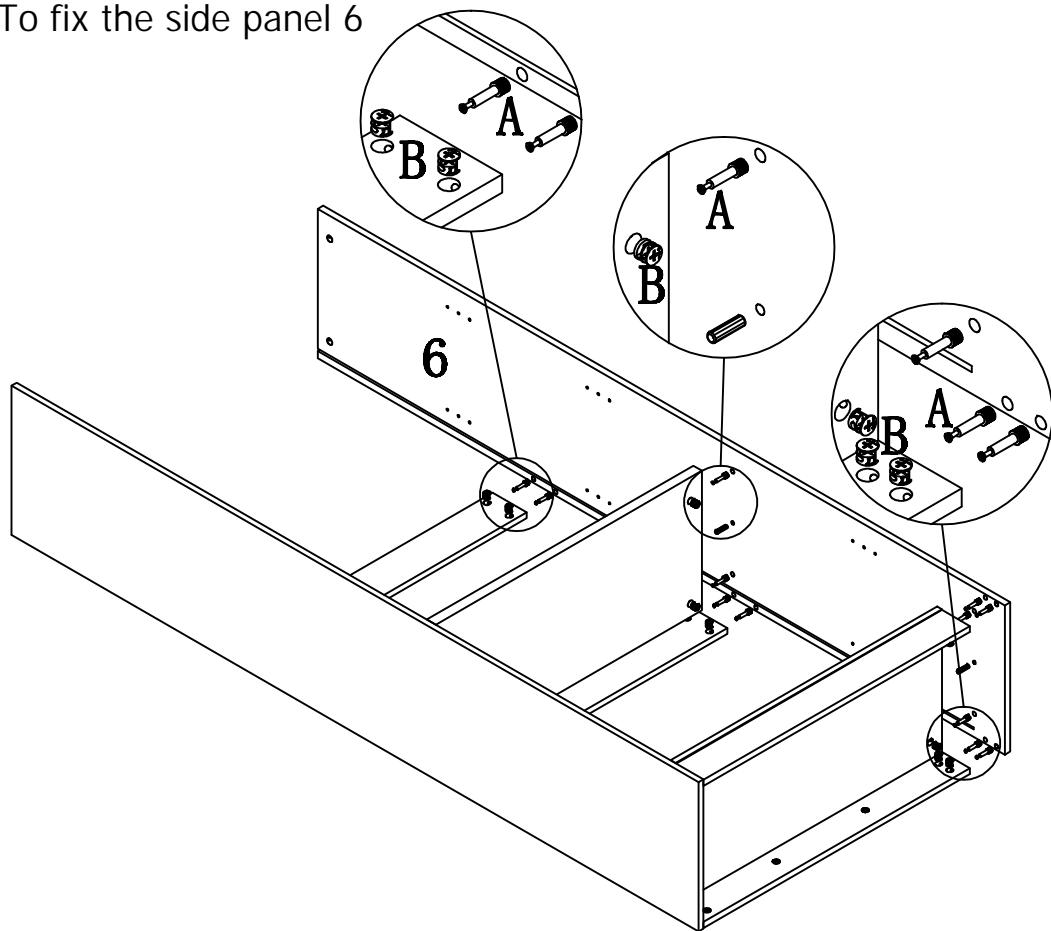


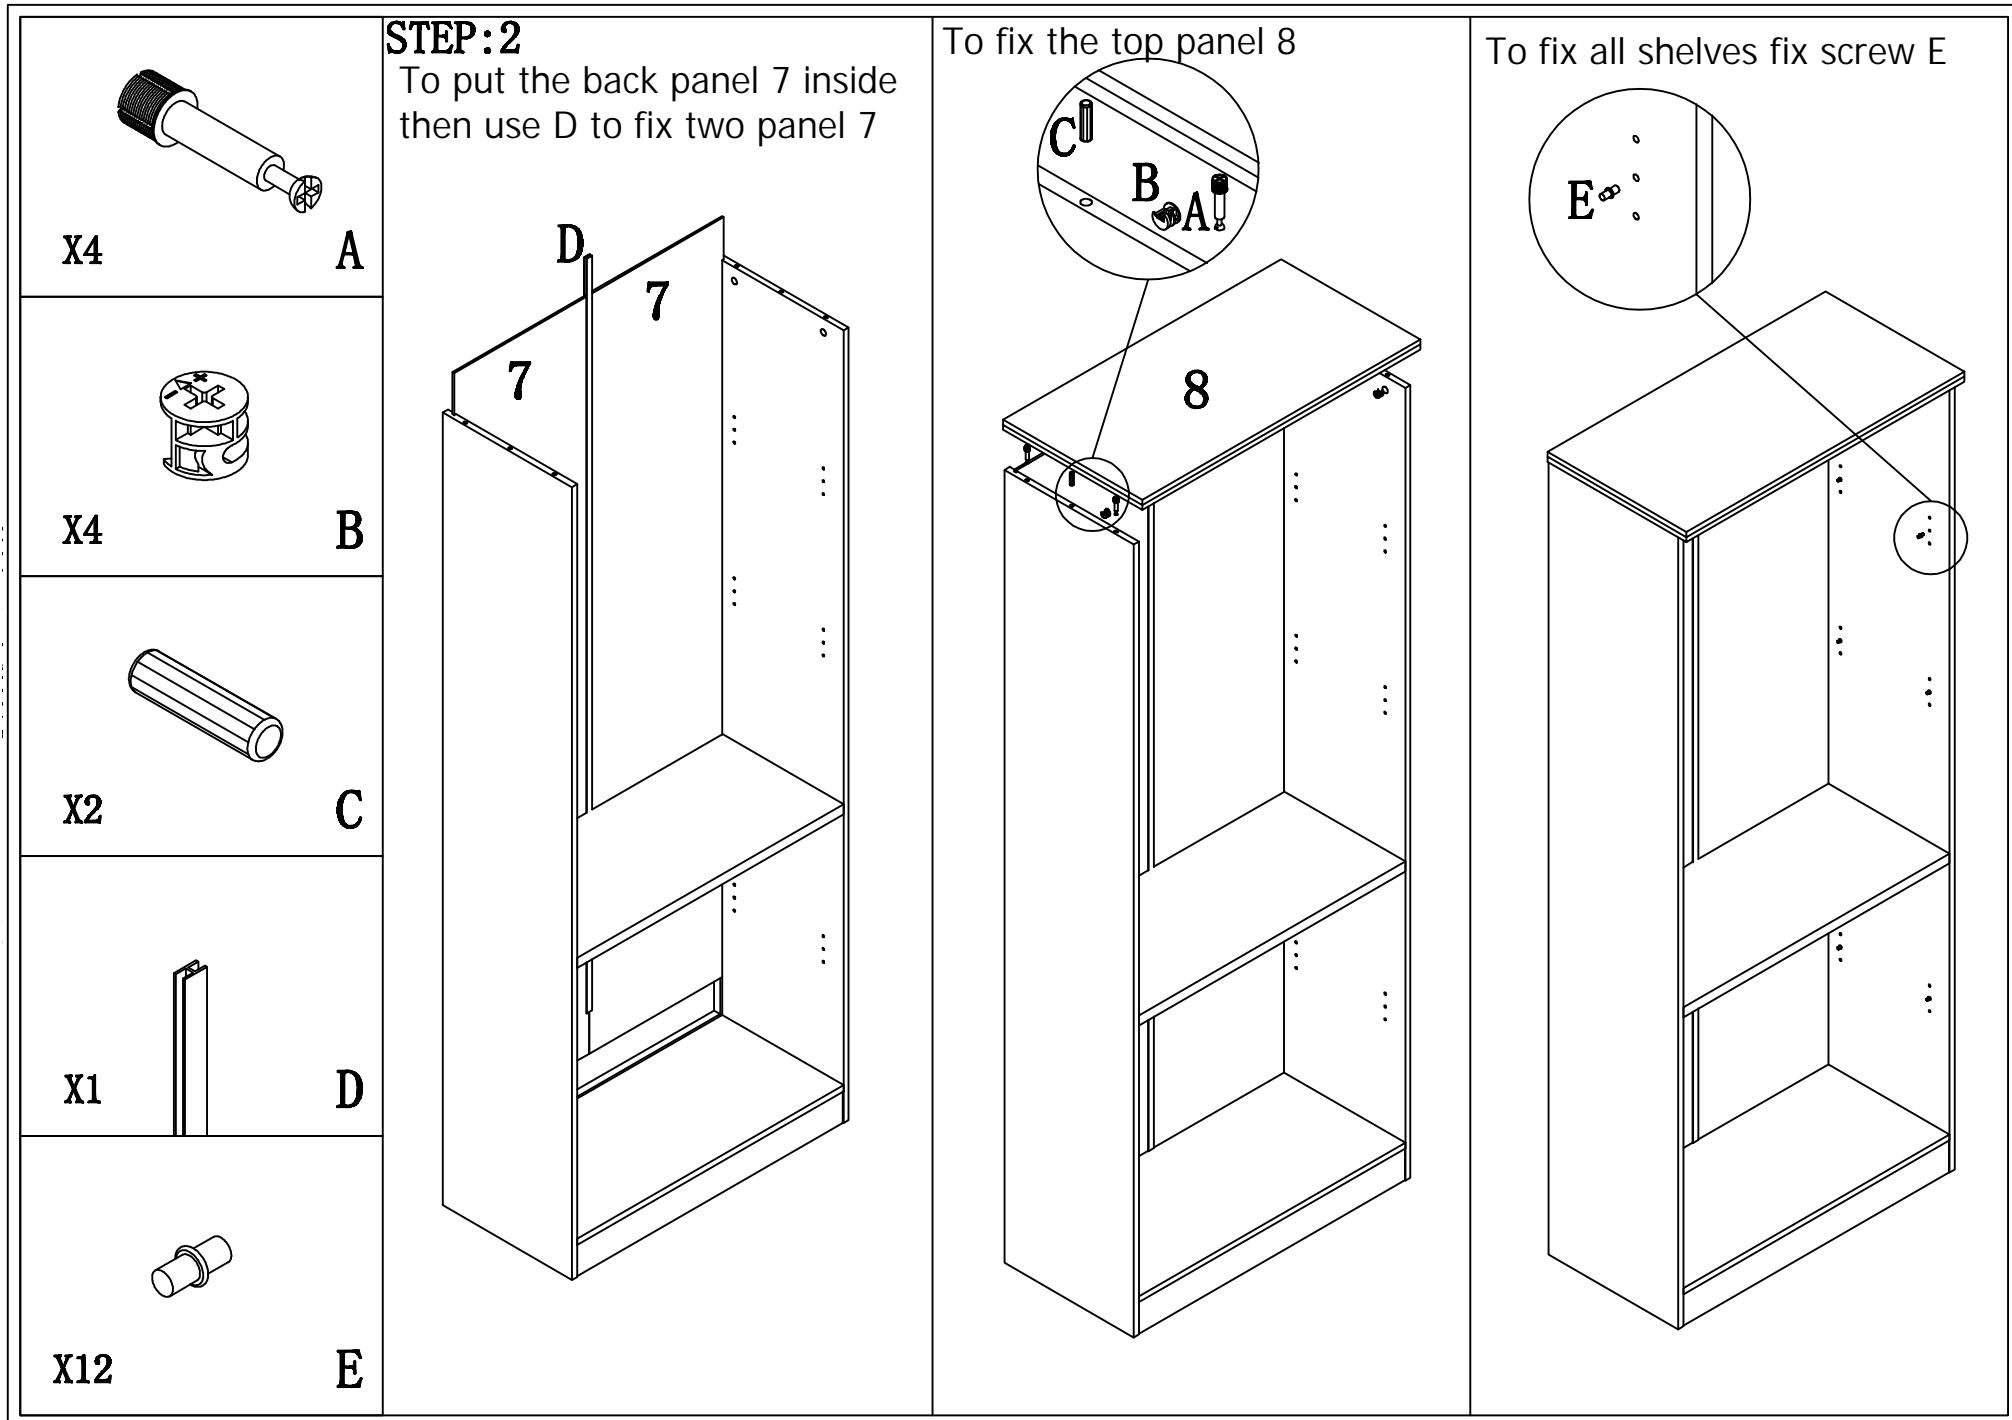

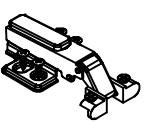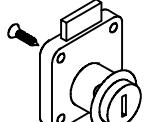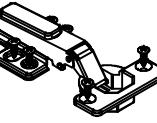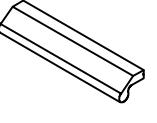	X6	F		X1	L
	X4	G		X4	M
	X4	H		X68	N
		M4*18			O
	X4	I	X1		
		M4*25			
	X4	J			
	X2	K			

STEP:3

To put the all shelves panel 12 inside ,to fix the hinges on doors, then to fix in cabinet

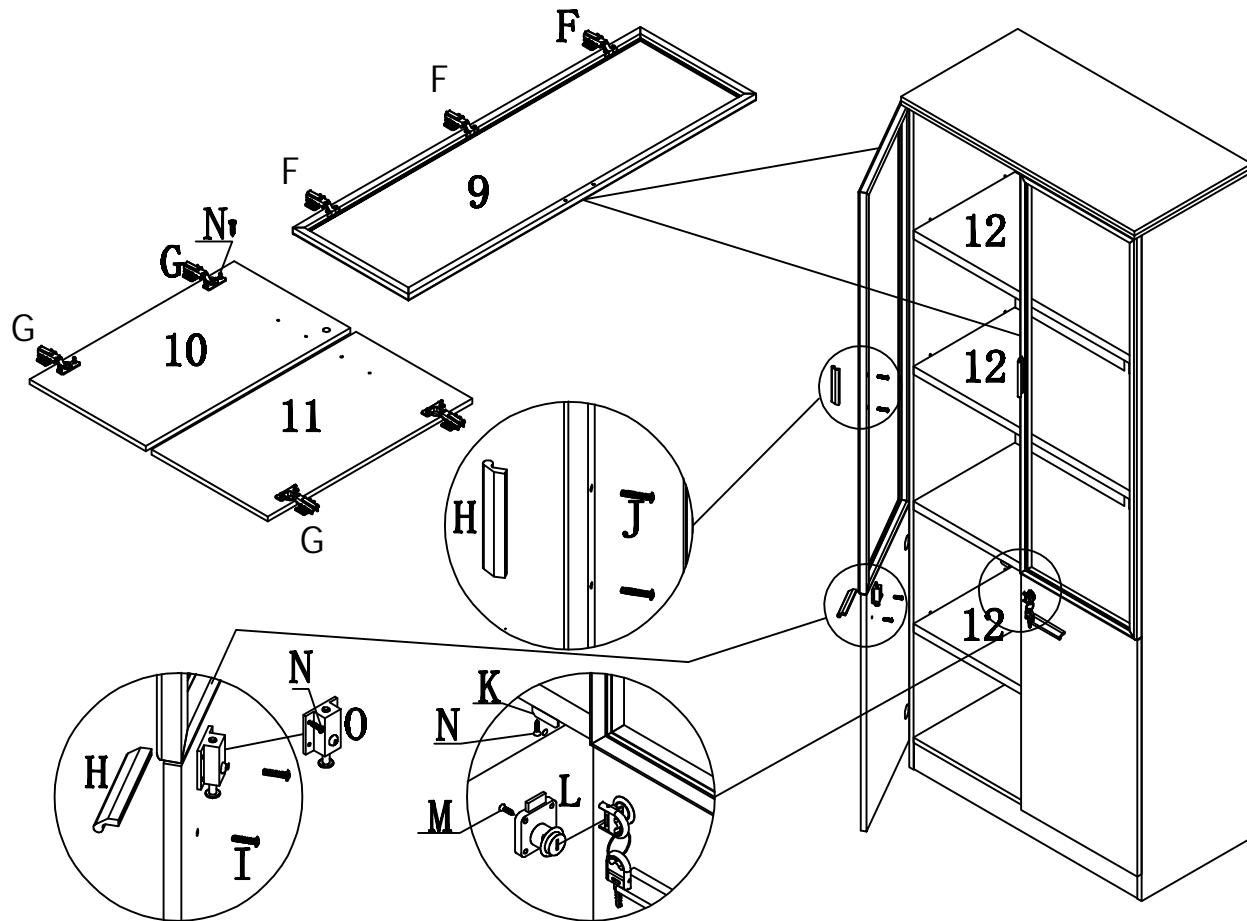

To fix the inside lock O on left wood door and fix the handles for all doors

To fix lock metal support K and fix the outside lock L

3. 5*14 STEP:4


To fix the back panel rubber P

FINISH



X8

N



X8

P

