















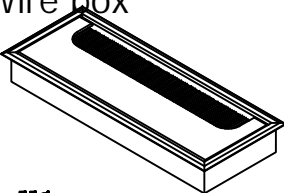
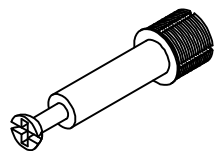



246-000004

<div>Minifix Screw</div> <div></div> <div>X74A</div>	<div>Screw 4*30</div> <div></div> <div>X4F</div>	<div>Full overlay hinge</div> <div></div> <div>X2K</div>	<div></div> <div></div> <div>(2000X950XX760)</div>
<div>Minifix</div> <div></div> <div>X74B</div>	<div>Drawer rail</div> <div></div> <div>X1G</div>	<div>Handle</div> <div></div> <div>X2L</div>	
<div>Wood Minifix</div> <div></div> <div>X12C</div>	<div>Lock</div> <div></div> <div>X1H</div>	<div>Handle screw M4*18</div> <div></div> <div>X4M</div>	
<div>Shelves fix screw</div> <div></div> <div>X4D</div>	<div>Screw 4*20</div> <div></div> <div>X4I</div>	<div>Wire box</div> <div></div> <div>X1N</div>	
<div>Screw 3.5*14</div> <div></div> <div>X24E</div>	<div>Lock metal fix</div> <div></div> <div>X1J</div>	<div>Wire box</div> <div></div> <div>X1O</div>	

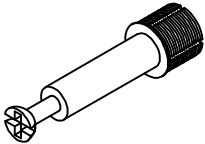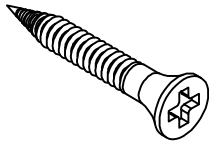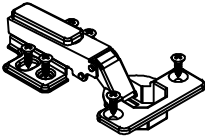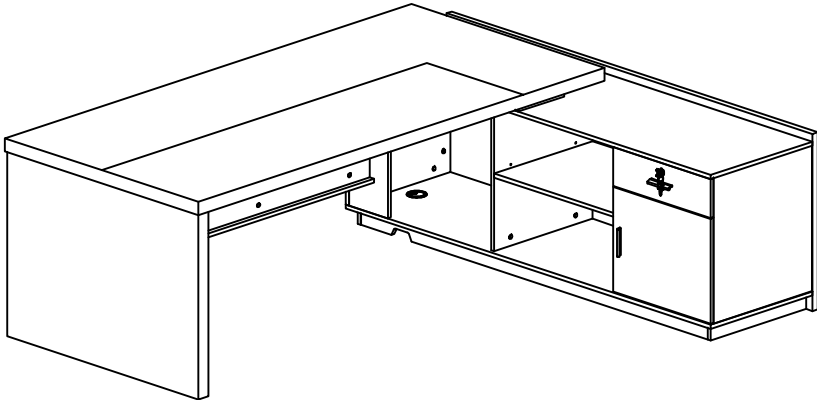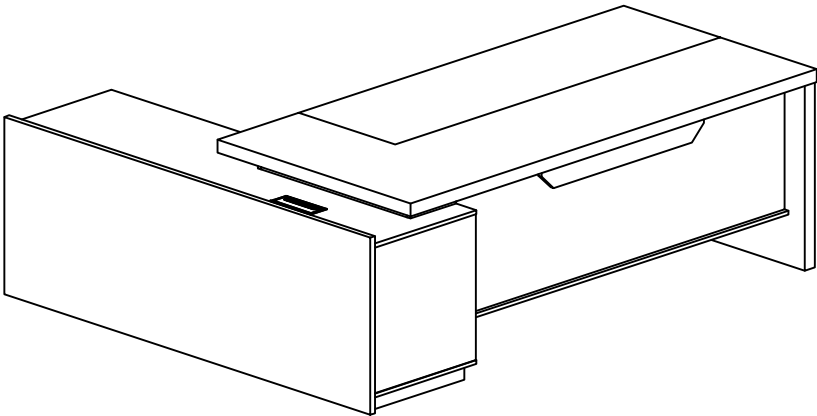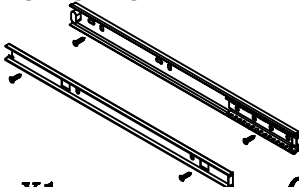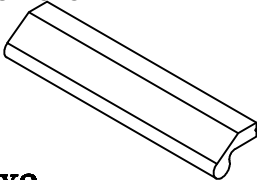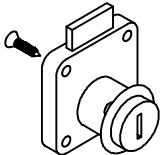


X28

A



X28

B



X8

C


First

To fix the back panel 1 and support panel 2 and 3

STEP:1


To fix the panel 4,5,6,7 ,then to fix the panel 8 ,final to fix the top panel 9

Second

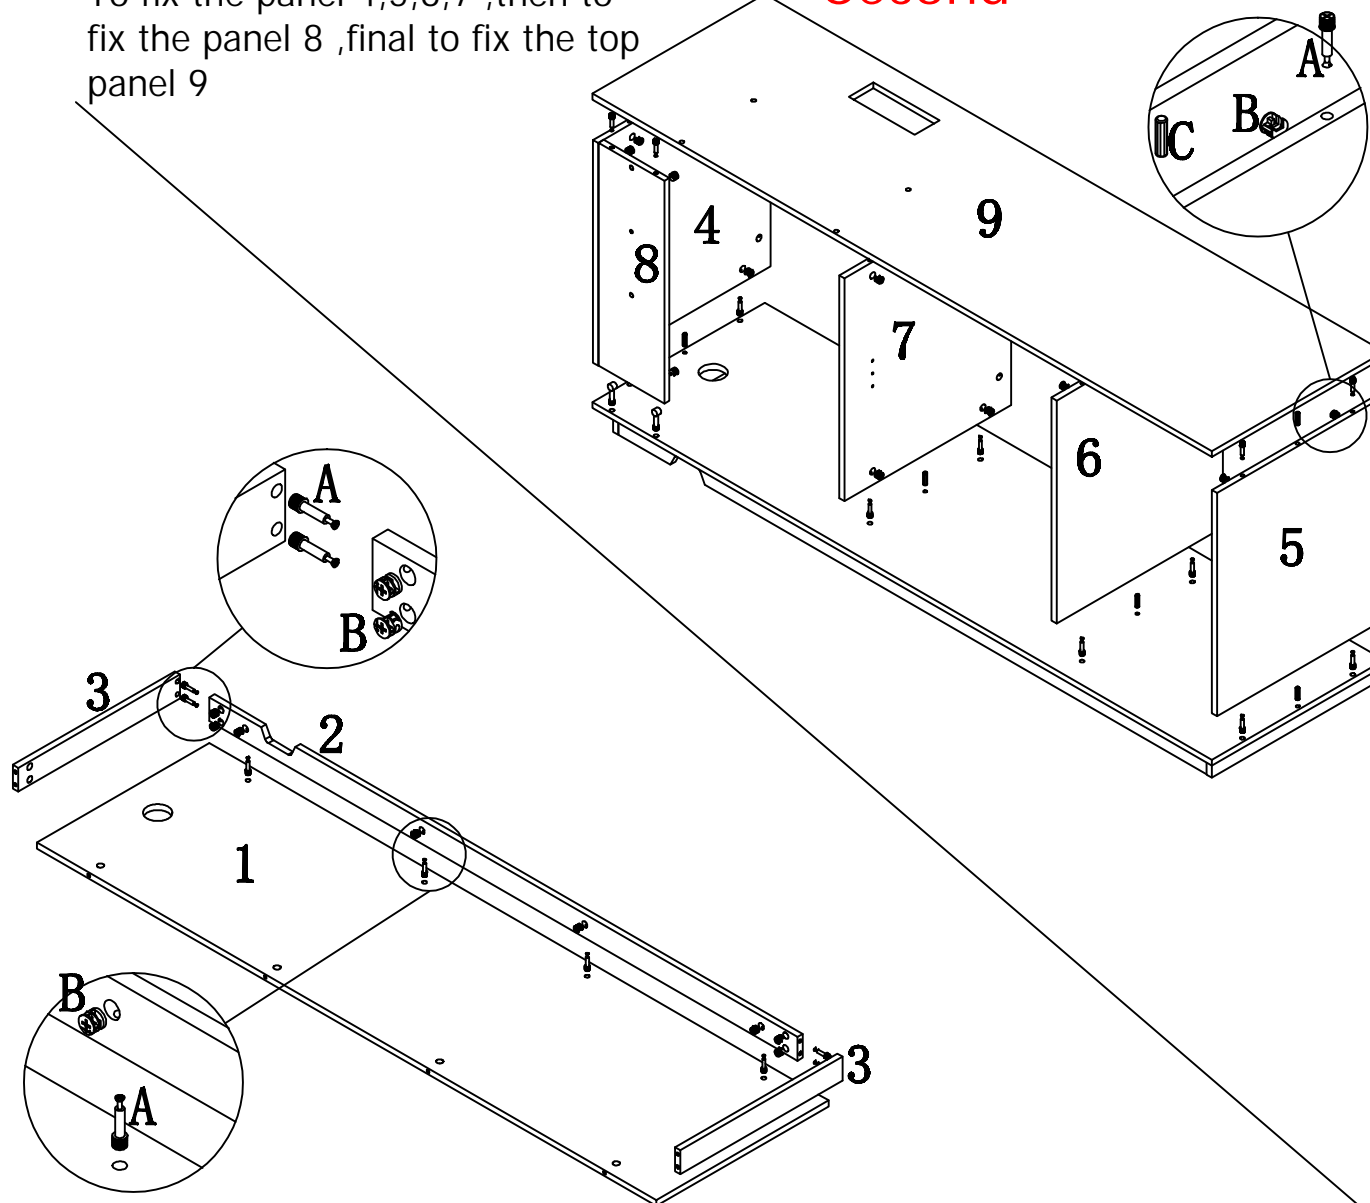


STEP:2

To fix the back panel 10

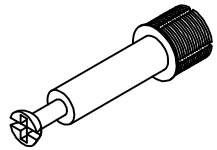


X20

A

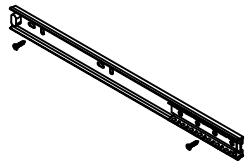


X1

G



X20

B

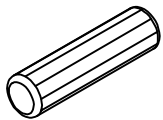

X4


C



X4


D

3.5*14















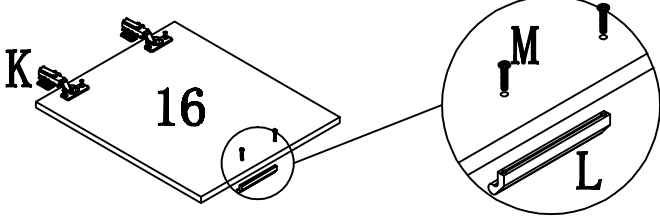
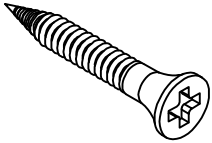
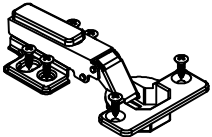
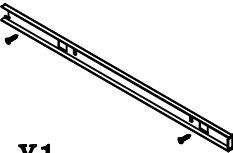
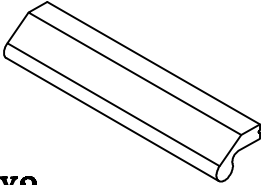
X6

E

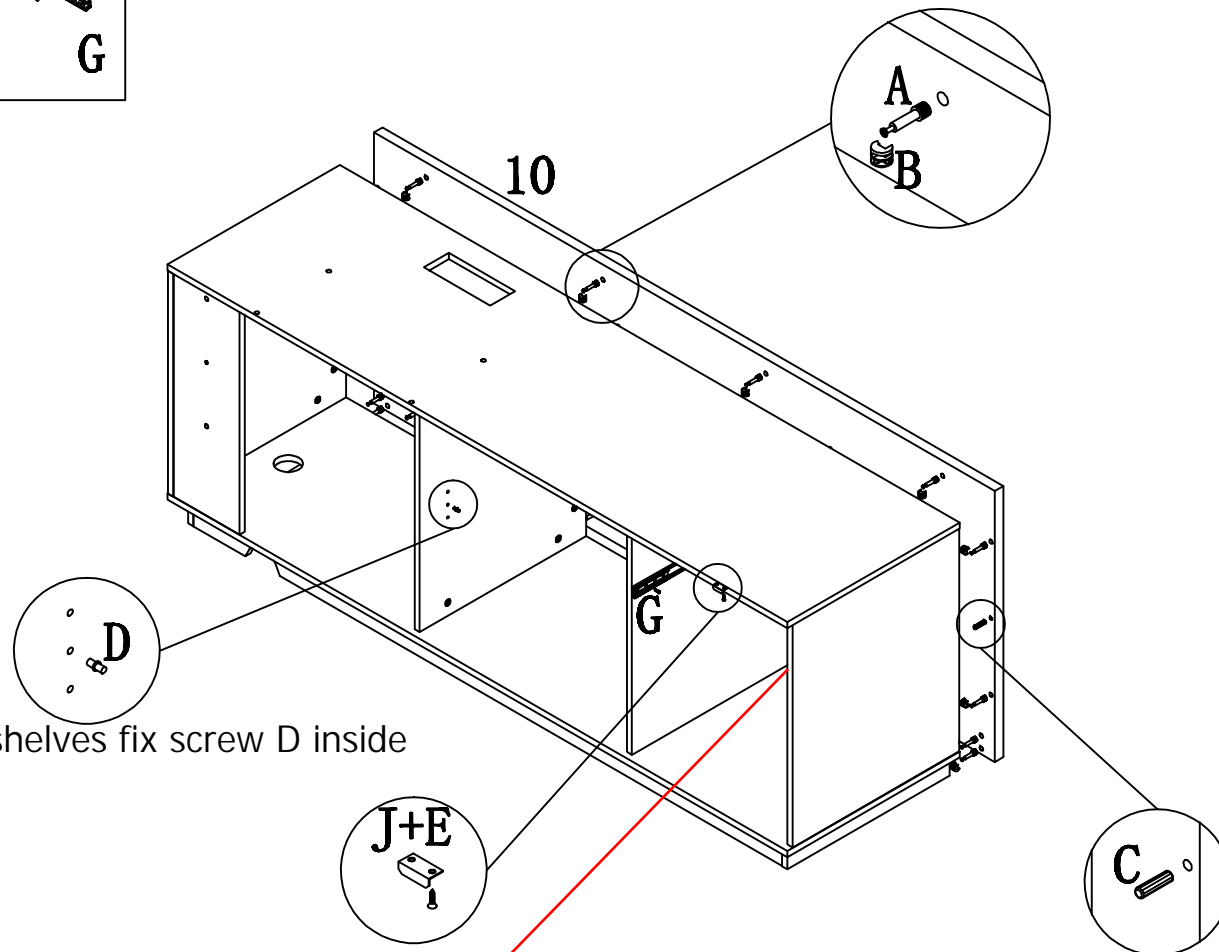


To put the shelves fix screw D inside

To fix the both side rail G and
fix the lock metal minifix J

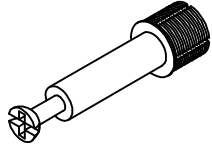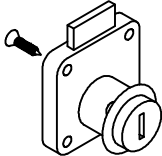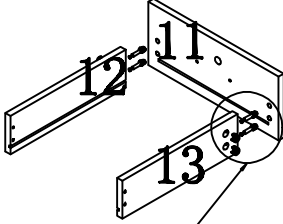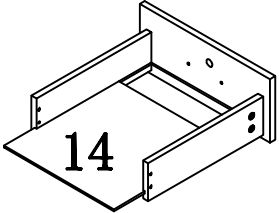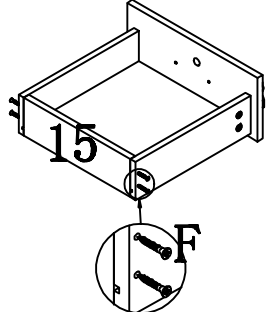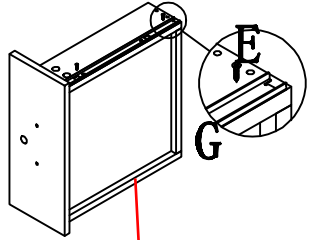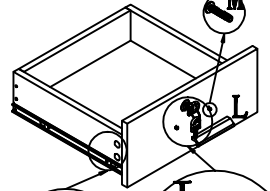 <p>X4 A</p>	 <p>X1 H</p>	<p>M4*18 STEP:3</p>  <p>X4 M</p>	<p>To put the panel 14 inside and fix the panel 15</p>	<p>To fix the both side rail G</p>
 <p>X4 B</p>	 <p>X4 I</p>	<p>4*20 To fix the panel 11,12,13</p>   		 <p>To use screw E to fix bottom panel four side more tough</p> 
<p>3.5*14</p>  <p>X18 E</p>	 <p>X1 J</p>	<p>To fix the hinge K on door panel 16 and fix the handle L ,then to fix in cabinet</p> 		<p>To fix the lock H and handle L</p>
<p>4*30</p>  <p>X4 F</p>	 <p>X2 K</p>			
 <p>X1 G</p>	 <p>X2 L</p>			


STEP:4

To fix the front panel 20 and 21

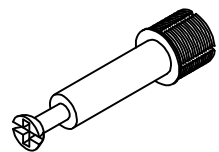


X16

A




X16

B




X1

N

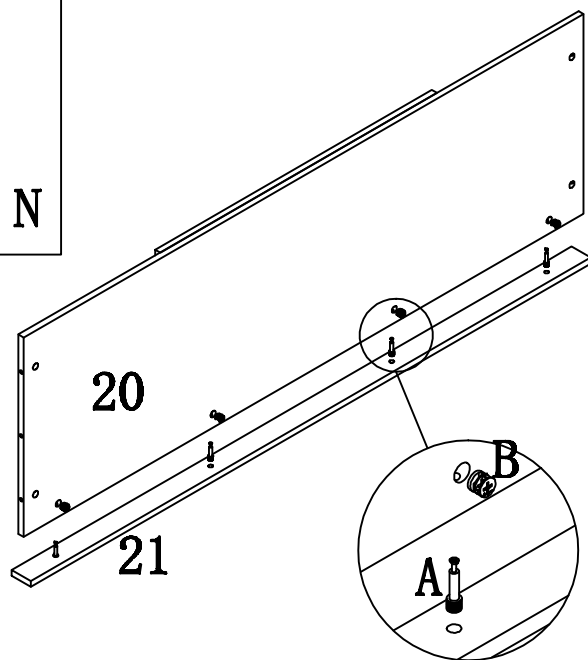


To fix the side table support panel 18 and 19

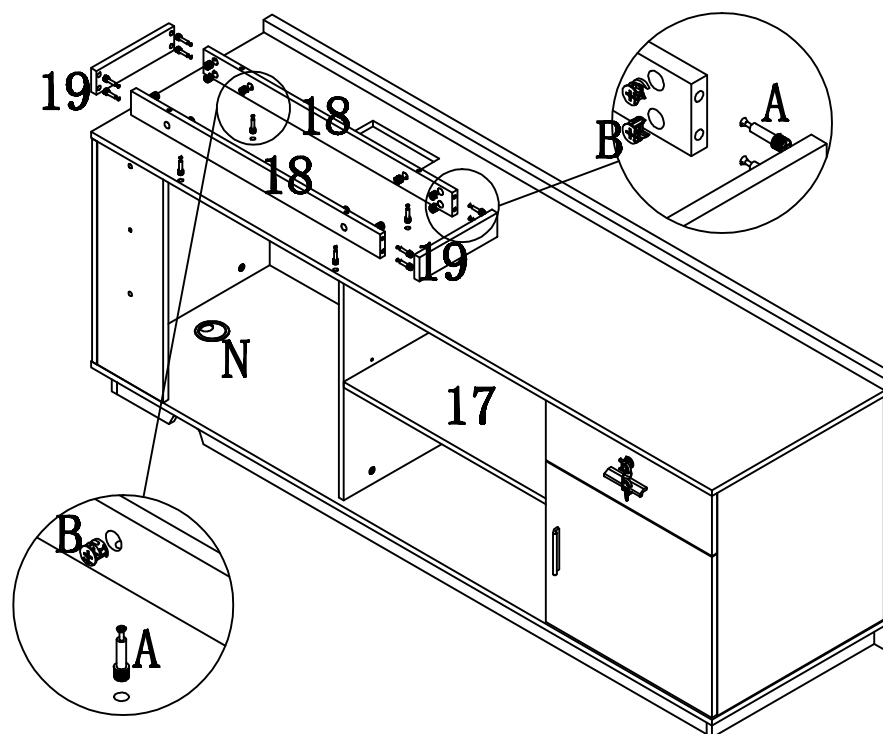


STEP:5

To fix the front panel and side table and leg panel 22

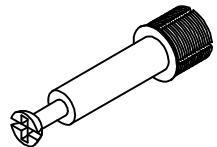


X4

A




X4


B



X2


C

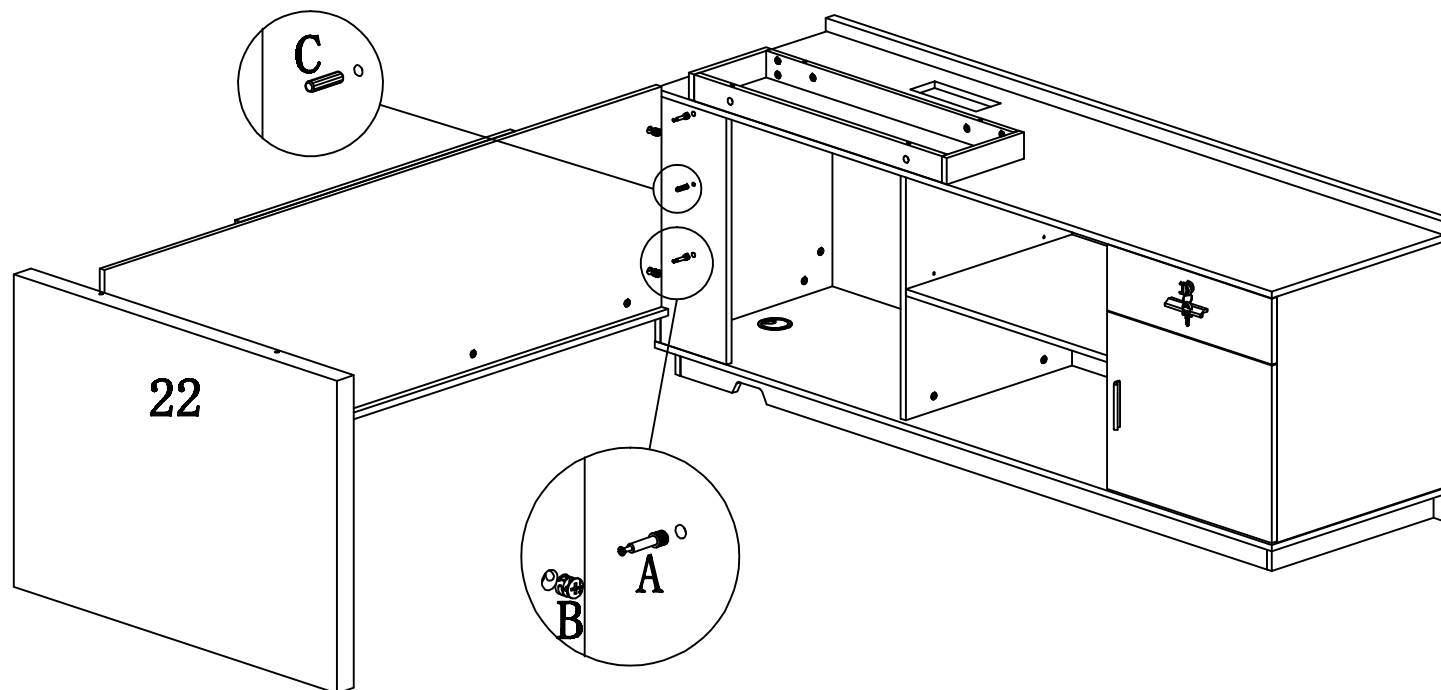

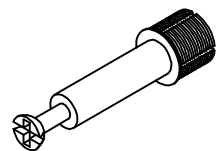


X6

A



X6

B

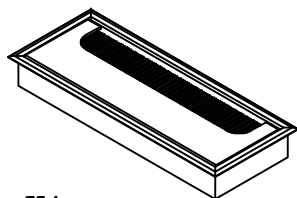

X1

O

STEP:6

To fix the table top panel 23

FINISH

